



Project Lone Pine Professional Studio Monitors

LP-6/LP-8 v2 User's Guide





Table of Contents

IMPORTANT SAFETY INFORMATION.....	3
ABOUT YOUR STUDIO MONITOR.....	5
FULL SPECIFICATIONS.....	8
INPUTS AND CONTROLS.....	9
DIP SWITCHES.....	12
CLIMATE CONSIDERATIONS.....	15
FIRST TIME SETUP.....	15
TROUBLESHOOTING.....	16
LIMITED WARRANTY.....	17



Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Power the product down, and unplug it from power before cleaning.
7. Clean only with a dry cloth.
8. Do not block any ventilation openings.
9. Keep ventilation opening free of dust or other matter.
10. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
11. No naked flame sources (such as lighted candles,) should be placed on the product.
12. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, with one blade wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
13. Protect the power cord from being walked on or pinched, particularly at plugs, receptacles, and at the point where they exit the apparatus.
14. Use only attachments and/or accessories specified by the manufacturer.
15. Use only with a cart, stand, tripod, plate, bracket, or table specified by the manufacturer. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
16. Unplug this apparatus during lightning storms or when unused for long periods of time.
17. This apparatus shall not be exposed to dripping or splashing.
18. No object filled with liquids, such as a vase or a glass, should be placed on the apparatus.
19. This apparatus is to be used in a moderate climate. Do not expose to extremely high or low temperatures.
20. Do not apply any sticker or decal to the speakers.





Important Safety Information

21. Refer all servicing to qualified service personnel. Servicing is required when:

- A. The apparatus is damaged in any way
- B. The power supply cord or plug is damaged
- C. Liquid or other objects have fallen into the product
- D. The product has been exposed to rain or moisture
- E. The product does not operate normally
- F. The product has been dropped

22. High sound pressure in excess of 85 dB can cause hearing damage and/or loss. Do not expose yourself to high sound pressure levels.



The lightning bolt with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operation and maintaining (servicing) instructions in the literature accompanying the appliance.



About Your Studio Monitor

Congratulations on your Kali Audio LP-Series Studio monitors! These monitors were designed to deliver exceptional accuracy in all sorts of recording, mixing, and production applications. We're confident that no matter what genre or format you're working in, you will come to depend on these monitors for their accuracy, reliability, and superior design and construction.

Where does "LP" come from?

The official name of this product line is "Project Lone Pine." Kali names all of our product lines after towns in California. Lone Pine is a small town in the Eastern Sierra that acts as a departure point for hikers and climbers hoping to summit Mt. Whitney, the highest mountain in the contiguous US. We felt that this was an appropriately ambitious name-sake for our first product line.

Features

Output

The LP-6 Professional Studio Monitor is designed to have a continuous output of 85 dB at 2.9 meters with 20 dB of headroom. In practical terms, this means that the speaker has sufficient output to listen at safe levels for long periods of time in most listening environments that were designed for 1 or 2 listeners.

The LP-8 has a slightly longer listening distance of 3.6 meters. This makes it ideal for larger rooms, where up to 3 people may be listening at any time.

20 dB of headroom ensures that momentary peaks in sound pressure level, including instruments like kick drum and effects like gunshots or explosions, can be reproduced accurately and with minimal distortion.

Limiter

The LP-6 and LP-8 are both equipped with a limiter circuit that will protect the speaker from unsafe voltage levels. This will be plainly audible as distortion, indicating that the speaker is receiving too much input signal. If this is the case, it is recommended to reduce the volume of the playback material.



About Your Studio Monitor

Features

Low Noise Port Tube

The port tube on the LP-Series was designed to deliver all the benefits of a front-firing port tube, without any drawbacks associated with noise.

On most port tubes, air leaves at different speeds from different points of the opening, creating noisy turbulence. This turbulence can be heard as “chuffing,” or an audible air sound coming from the monitor. This sound will add to the noise floor and obscure the details of the low end.

The port tube on LP-Series was designed to ensure that all of the air leaves the port tube at the same velocity. This helps add to the low end response of the speaker, while keeping the bass clean, tight, and devoid of extra noise.

3-D Imaging Waveguide

The 3-D Imaging Waveguide allows you to hear a 3-D soundstage from a stereo pair of speakers. By matching the shape of the waveguide to the interactions of the HF and LF drivers, this waveguide produces a coherent stereo image that is wider, taller, and deeper than the space where the speakers are placed.

The LP-Series accomplishes this by ensuring that the speaker’s reflected sound matches its direct sound. Every time you hear a loudspeaker, you’re hearing both the direct sound from the speaker, and reflections from the the room.

When those reflections are congruent with the direct sound from the speaker, listeners perceive a better sound overall, and are able to make out very subtle details like where microphones are placed in a room.

High Performance Woofer

The LP-Series uses a woofer with an exceptionally large voice coil and magnet. This allows for greater linearity, resulting in exceptional dynamic range and clarity, as well as extended low end response. All of this is delivered with minimal distortion.

DSP

The LP-6 and LP-8 are equipped with digital signal processing (DSP.) The DSP on the LP-Series controls the loudspeaker’s tuning, the limiter function, the crossover, the boundary EQs, and user definable HF and LF trim.



About Your Studio Monitor

Features

2nd Wave

The LP-Series now uses Kali's 2nd Wave technology platform, which realizes several advantages over our older products. As of November 2021, all Kali Audio studio monitors are now in their 2nd Wave. If you purchased an LP-series monitor before that date, it may be a 1st Wave product. This manual only applies to 2nd Wave versions of the LP-6 and LP-8. A manual for the 1st Wave products can be found at KaliAudio.com/Product-History

To learn more about our 2nd Wave platform, and to check whether the monitor you have is the original version or 2nd Wave, visit KaliAudio.com/secondwave.


Boundary Compensation EQs

Kali's team came up with boundary compensation EQ settings at The Village Studios in Los Angeles to help you get the optimum sound for where you need to put your speakers. Combined with the LF and HF trims, this will ensure that the speakers sound their best no matter what room you're mixing in.

A full listing of the different boundary EQ settings and how to use them can be found on page 12 of this manual.

Accurate Frequency Response

The LP-6 and LP-8 are tuned to be as accurate as possible. Full resolution measurement data can be downloaded from our website.

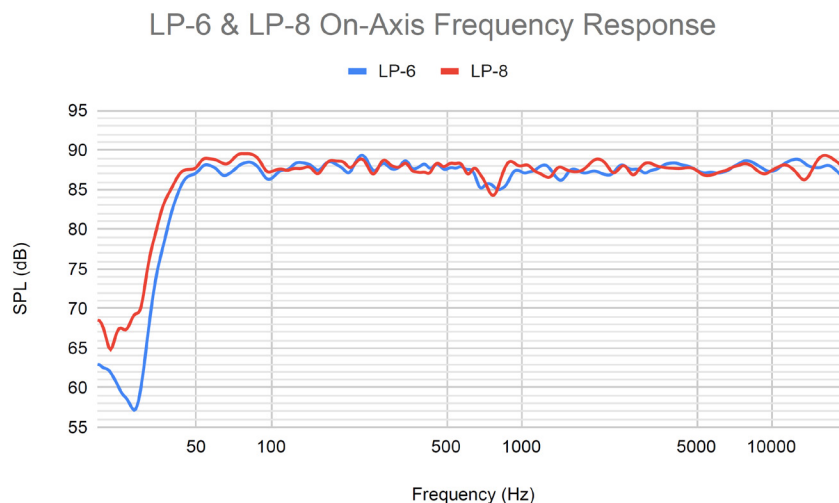



Specifications

	LP-6	LP-8
Powered:	Yes	
Amplifier Class:	D	
Power Configuration:	Bi-Amped	
HF Power:	40W (Continuous)	
LF Power:	40W (Continuous)	60W (Continuous)
Total Power:	80W (Continuous)	100W (Continuous)
HF Driver:	1-Inch Textile Dome	
LF Driver:	6.5-Inch Optimized Paper	8-Inch Optimized Paper
Crossover:	1500 Hz	1800 Hz
Frequency Response: (-10dB)	39 Hz - 25 kHz	37 Hz - 25 kHz
Frequency Range: (+/-3 dB)	47 Hz - 21 kHz	45 Hz - 21 kHz
Recommended Listening Distance:	.5 - 2.5 Meters	.5 - 3.5 Meters
Max SPL (Peak @ 1M):	115 dB	117 dB
System THD:	<3% from 80 Hz to 1.7 kHz <2% above 1.7 kHz (90dB SPL @1m)	<2.5% from 80 Hz to 400 Hz <1.4% above 400 Hz (90dB SPL @1m)
Unbalanced Inputs:	1 x RCA	
Balanced Inputs:	1 x XLR, 1 x TRS	
TRS/XLR Input Sensitivity:	94dB SPL @1m (anechoic) for +4dBu input.	
RCA Input Sensitivity:	94dB SPL @1m (anechoic) for -10dBV input.	
Enclosure:	Front Ported	
Height:	14.125 Inches (35.9 cm)	16.5 Inches (41.9 cm)
Width:	8.75 Inches (22.2 cm)	10 Inches (25.4 cm)
Depth:	10.25 Inches (26 cm)	11.25 Inches (28.6 cm)
Product Weight:	15.54 lbs (7.05 kg)	19.8 lbs (9 kg)



Inputs and Controls

The diagram illustrates the front panel of the Kali LP-8 Professional Studio Monitor. It features a top section with a control panel containing several buttons and trimmers, and a bottom section with various input ports and a volume knob. The control panel includes buttons for speaker distance (>.5m and <.5m) and a 3-band EQ section with LP Trim (20 Hz to 700 Hz) and HF Trim (1500 Hz to 20 kHz) controls. The input section includes RCA IN (-10 dBV), TRS IN (+4 dBu), and XLR IN (0 dBu) ports, along with a volume knob ranging from -16 dB to 0 dB. A power specification of AC 100-240V 50/60Hz 250W Max is provided.

1 Control Panel

2 RCA IN (-10 dBV)

3 TRS IN (+4 dBu)

4 XLR IN (0 dBu)

5 Volume Knob

6 Volume Knob

7 XLR IN (0 dBu)

8 XLR IN (0 dBu)

Power AC -100-240V 50/60Hz
250W Max

LP-8

Professional Studio Monitor

2nd Wave

For more information, visit KaliAudio.com/secondwave

Model No.: LP-8 V2
Serial No.:

Intertek
5018650

CONFORMS TO IEC
STD 60968-1
CERTIFIED TO IEC
STD C222 NO. A2368-1

CAUTION
ELECTRIC SHOCK
WARNING: SHOCK HAZARD - DO NOT OPEN!
AVIS: RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING CONDITIONS:
CLASS B DIGITAL DEVICE
THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
THIS DEVICE MUST ACCEPT ANY INTERFERENCE THAT MAY CAUSE
UNDESIRABLE OPERATION.

KALI
AUDIO

Designed and Engineered
in California
Made in China



Inputs and Controls

Dip Switch Quick Reference Guide

- 1** The quick reference guide on the back of the speaker can help you set the dip switches to the appropriate positions for your application without needing to consult this manual.

Dip Switches

- 2** The dip switches control Boundary EQ, HF and LF Trim, and power to the RCA input. A full explanation of the operation of the dip switches can be found on page 11.

RCA Input (-10 dBV Sensitivity)

The RCA input is for use with consumer devices like record players, laptops, smart phones, and media players. Commonly, the playback device will either have an RCA or a 3.5mm (Aux) output. Cables from either of these outputs to RCA are easy to find.

- 3** By default, the RCA input on the speaker is OFF. This is to prevent interference when that input is not being used. When connecting to the RCA input, enable it by moving switch #8 on the dip switches UP to the ON position. If the RCA input is no longer being used, be sure to move switch #8 back DOWN to the OFF position.

XLR Input (+4 dBu Sensitivity)

- 4** The XLR input is for use with professional audio devices like mixers, interfaces, and controllers. Depending on your device, it will either use XLR or 1/4" TRS outputs, and either can be used with this speaker. However, do not connect both XLR and TRS to the same speaker at the same time.

TRS Input (+4 dBu Sensitivity)

- 5** The TRS input is for use with professional audio devices like mixers, interfaces, and controllers. Depending on your device, it will either use XLR or 1/4" TRS outputs, and either can be used with this speaker. However, do not connect both XLR and TRS to the same speaker at the same time.

Unbalanced, TS 1/4-inch cables may also be used, although these are far more susceptible to noise.



Inputs and Controls

Volume Control

The volume control allows users to adjust the output of the speaker from $-\infty$ to +6 dB. There is a center detente at the +0 dB setting, and this is where Kali recommends you leave the volume setting, adjusting the level instead from your device. Two notable exceptions to this recommendation are:

6

1. If you are working in an asymmetrical room, it may be necessary to have one monitor louder than the other to achieve balance.
2. If your playback device does not have an independent volume control, it will be necessary to adjust the volume directly from the speaker.

Power Input

7

Connect the provided power cord to this input. The LP-Series monitors have an international switch-mode power supply, so there is no need to set the speaker for your local voltage.

On/Off Switch

8

Power the speaker on and off. Be sure to power the speaker off when connecting or disconnecting the power cable, during lightning storms, or during extended periods of disuse.




Boundary EQs & Dip Switches

One of the most innovative features of the Lone Pine Series monitors are the boundary compensation EQs. These EQs were made to compensate for low frequency interactions that the speakers will have with various surfaces in many common placements.

Each set of dip switches controls one aspect of the speakers performance, independent of the other switches. Switches 1-3 control the boundary compensation EQs. Switches 4 and 5 control the LF trim. Switches 6 and 7 control the HF trim. Switch 8 controls power to the RCA. For this reason, the explanations of the different dip switch settings will only reference the set of switches currently applicable.

Switches 1-3: Boundary Compensation EQs


Position 1: Free Space

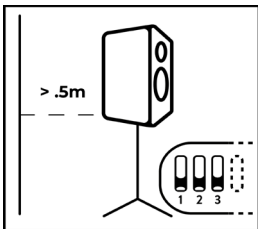

The speaker is on a monitor stand, at least .5 meters (about 20 inches) away from any walls. **This is the ideal position for the loudspeaker.**

- Switch 1: DOWN
- Switch 2: DOWN
- Switch 3: DOWN


Position 2: On Stands, Close to a Wall

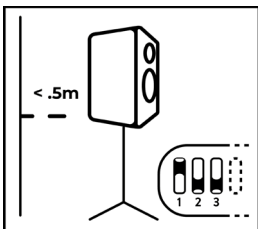

The speaker is on a monitor stand, and is within .5 meters (20 inches) of a wall, without being butted right against one.

- Switch 1: UP
- Switch 2: DOWN
- Switch 3: DOWN

Position 3: On Stands, Against a Wall

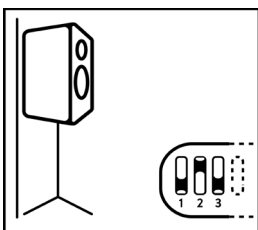

The speaker is on a monitor stand, and is within .5 meters (20 inches) of a wall, without being butted right against one.


- Switch 1: DOWN
- Switch 2: UP
- Switch 3: DOWN



Dip Switches

Switches 1-3: Boundary Compensation EQs


Position 4: Console Bridge

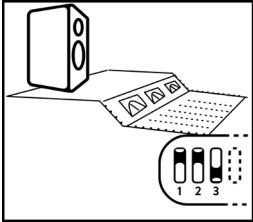

The speaker is on a console bridge or meter bridge.

- Switch 1: UP
- Switch 2: UP
- Switch 3: DOWN


Position 5: On a Desk, Away from Walls

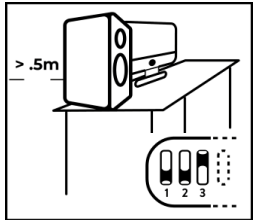

The speaker is on a desk or table, and is more than .5 meters (20 inches) away from any walls.

- Switch 1: DOWN
- Switch 2: DOWN
- Switch 3: UP


Position 6: On a Desk, Close to a Wall

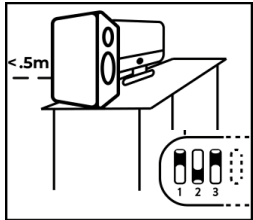

The speaker is on a desk or table, and is within .5 meters (20 inches) of a wall, without being butted right against one.

- Switch 1: UP
- Switch 2: DOWN
- Switch 3: UP


Position 7: On a Desk, Against a Wall

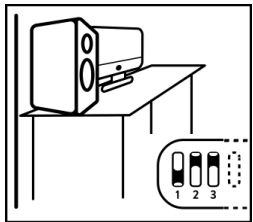

The speaker is on a desk or table, and is as close to a wall as possible without pinching any cables.

- Switch 1: DOWN
- Switch 2: UP
- Switch 3: UP

Position 8: Desktop with Stands

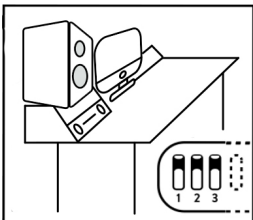

The speaker is on a desk with speaker stands, or on a purpose-built studio desk.


- Switch 1: UP
- Switch 2: UP
- Switch 3: UP



Dip Switches

Switches 4&5: Low Frequency Trim

The Low Frequency trim will add or subtract 2 dB from the Low Frequency response of the speaker. This can be done as a matter of personal taste, or if the room you're mixing in requires additional adjustment beyond what is offered by the boundary compensation EQs.

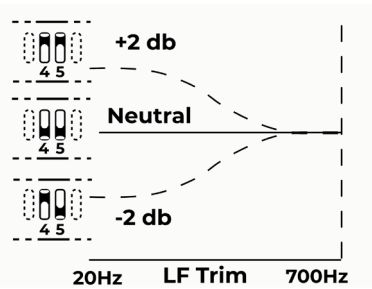

Switch 4: Engage LF Trim

DOWN: LF Trim Disengaged
UP: LF Trim Engaged


Switch 5: Adjust LF Trim:

DOWN: -2 dB in Low Frequencies
UP: +2 dB in Low Frequencies

Note: Switch 5 does not function independent of switch 4. If switch 4 is DOWN, the LF trim will be DISENGAGED, and switch 5 will have no effect.

Switches 6&7: High Frequency Trim

The High Frequency trim will add or subtract 2 dB from the High Frequency response of the speaker. This can be done as a matter of personal taste, or if the room you're mixing in requires additional adjustment beyond what is offered by the boundary compensation EQs.

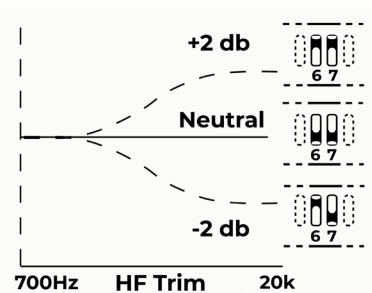

Switch 6: Engage HF Trim

DOWN: HF Trim Disengaged
UP: HF Trim Engaged


Switch 7: Adjust HF Trim:

DOWN: -2 dB in High Frequencies
UP: +2 dB in Low Frequencies

Note: Switch 7 does not function independent of switch 6. If switch 6 is DOWN, the HF trim will be DISENGAGED, and switch 7 will have no effect.

Switch 8: RCA

Switch 8 turns the RCA input on and off. By default, the RCA input on the speaker is OFF. This is to prevent interference when that input is not being used. When connecting to the RCA input, enable it by moving switch #8 on the dip switches UP to the ON position. If the RCA input is no longer being used, be sure to move switch #8 back DOWN to the OFF position.

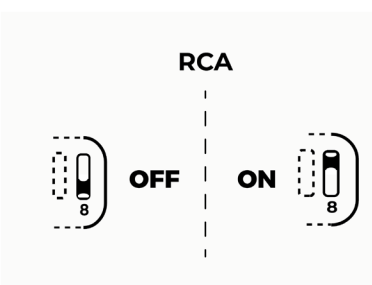



Climate Considerations

- The Lone Pine Series' studio monitors' enclosures are made of MDF wood and wrapped in vinyl, which is sensitive to heat and humidity. The product should be kept and used in a climate-controlled environment. Exposure to direct sunlight, moisture, or consistent humidity above 65% may cause the vinyl to peel and wrinkle. This is not covered under warranty.

First Time Setup

- Before you plug the speaker in, make sure that the power switch is in the OFF position
- Plug the speaker in
- Connect audio cables
 - ◊ If you're connecting RCA, make sure that dip switch #8 is switched UP to the ON position
 - ◊ If you're connecting XLR or TRS, make sure that dup switch #8 is switched DOWN to the OFF position
 - ◊ Do not connect more than one audio cable to the speaker at the same time.
- Turn the volume knob counter clockwise as far as it will go
- Turn the speaker on
- Start playing material from your playback device at a low volume
- Slowly turn the volume knob clockwise to the center detente, -0 dB position. Make sure you hear what you're playing
- Set the boundary EQ for your application. Refer to page 11 above.
- Repeat these steps for every speaker you're using.
- Sit in your listening position, and turn the volume up on your playback device to the desired level
- **Enjoy your new studio monitors!**



Troubleshooting

1. I opened the speaker, and it is damaged.

If you received a speaker that is obviously damaged, please contact your dealer immediately.

2. The speaker is making no sound.

- Is the speaker plugged in?
- Is the speaker turned on? There should be a blue LED on the front of the speaker if it's on. If this light is off, the speaker is turned off.
- Is the volume turned up?
- Are all cables plugged in to both your playback device and the speaker?
- Are you passing audio via your playback device?
- Are you using RCA? If so, have you moved dip switch #8 UP to the ON position?

If you've answered "Yes" to all the above and the speaker is still not making any sound, refer to number 5 below.

3. The speaker sounds distorted.

- Is the speaker playing too loud? Turn down the volume on the back of the speaker. If the distortion goes away, you may be playing the speaker too loud. Besides the problem of distortion, this can be damaging to your hearing if you are close to the speaker.

If you've turned down the volume on the speaker, and you're still hearing distortion, refer to number 5 below.

4. I hear cracks, hums, or buzzing.

- Are you using RCA?
 - a. If "yes," be advised that RCA is an unbalanced connection, and is prone to picking up noise as signal travels through the cable. This is especially true if you are using very long RCA cables.
 - b. If "no," be sure that the dip switch # 8 is moved DOWN to the OFF position.
- Is the speaker close to electronics like a television, wireless router, phone, motor, or radio? If so, these can interact with the speaker's magnet in ways that cause unwanted noise. Try moving the speaker at least .5 Meters (20 inches) from any such devices.
- Are there loose objects in the room that may be buzzing with the bass? Low frequencies can cause objects in a room to vibrate loudly. Make sure that small, hard objects like screws and other hardware are secure.

If none of the above solves the problem, refer to number 5 below.

5. Isolate the problem

There are many issues in the signal path which might be causing any of the above problems. Before you initiate a return, do your best to make sure that the problem isn't with your cables or your playback device. Here's a simple way to check:

- Disconnect your speaker from your source.
- Plug in the problematic speaker and allow it to play for a minute. Take careful note of the problems you're hearing.
- Disconnect the problematic speaker, and plug that same cable into another speaker. If you're hearing the same issues, there is likely a problem in your signal path, and not the speaker.

If you've determined that your problem is with your speaker, contact your dealer to initiate a return.



Warranty

What does this warranty cover?

This warranty covers defects in materials or workmanship for a period of one year (365 days) after the purchase date of the product.

What will Kali do?

If your product is defective (materials or workmanship,) Kali will replace or repair the product at our discretion - free of charge.

How do you initiate a warranty claim?

Contact the retailer from whom you bought the product to initiate a warranty process. You will need the original receipt showing the date of purchase. The retailer may ask you to provide specific details about the nature of the defect.

What is not covered?

The following cases are NOT covered by this warranty:

- Damage from shipping
- Damage from dropping or otherwise mishandling the speakers
- Damage resulting from failure to heed any of the warnings outlined on pages 3 and 4 of the user's manual, including:
 1. Water damage.
 2. Damage from foreign substances or substances entering the port tube.
 3. Damage resulting from an unauthorized person servicing the product.
 4. Damage resulting from the product being left plugged in during an electrical storm.

The warranty applies only in the United States. International Customers should contact their dealer about their warranty policy.