

# iD44

20in | 24out  
Audio Interface


## Quick Start Guide

AUDIENT

# iD44

## Welcome to your new Audient iD44 Audio Interface

Please read this quick guide to help get you started. For more information, download the full manual & specifications from: [audient.com/iD44/downloads](http://audient.com/iD44/downloads)

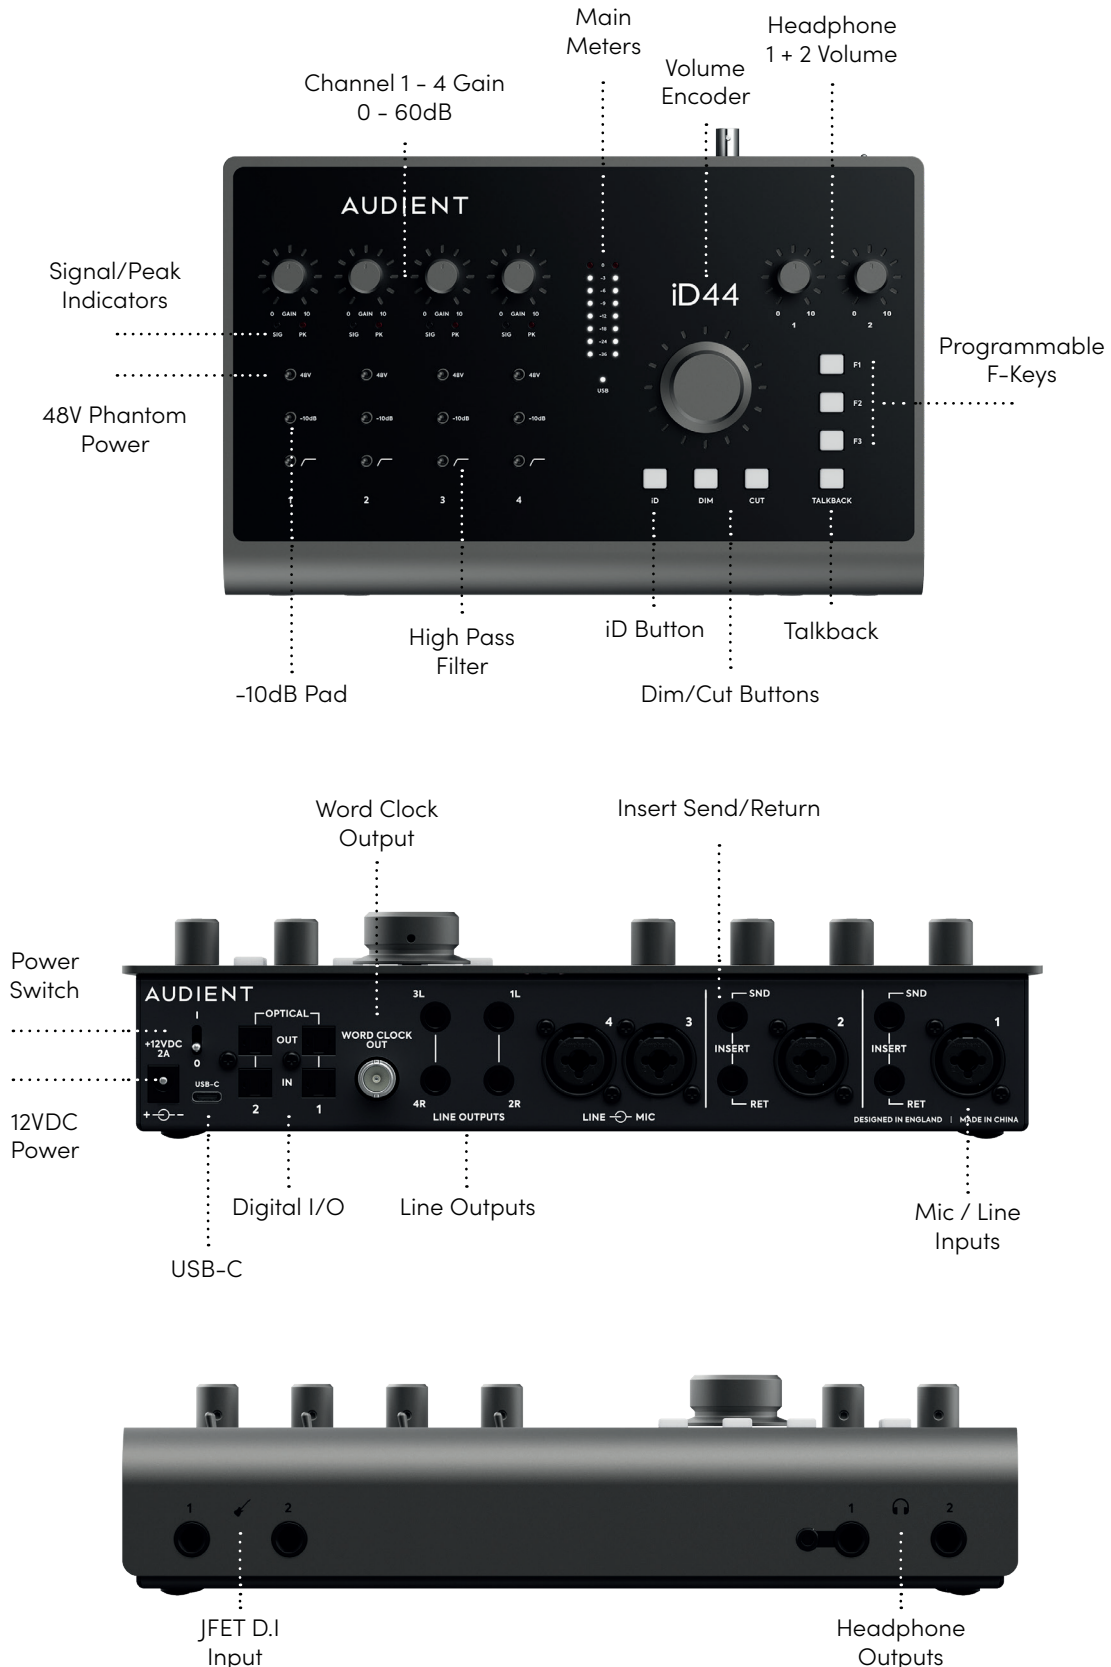


## Windows

1. Download the iD application for Windows from [audient.com/iD44/downloads](https://audient.com/iD44/downloads)
2. Open the installer and follow the instructions. It will ask you to connect iD44 during the installation procedure.
3. Reboot your computer to ensure all drivers have been installed correctly.
4. Launch iD from the app menu.
5. If there is a firmware update available, you will be prompted to install it when you open the app.

### System requirements:

Windows 10 or Later  
Intel Core 2 @1.6Ghz, or AMD equivalent  
1GB RAM Minimum

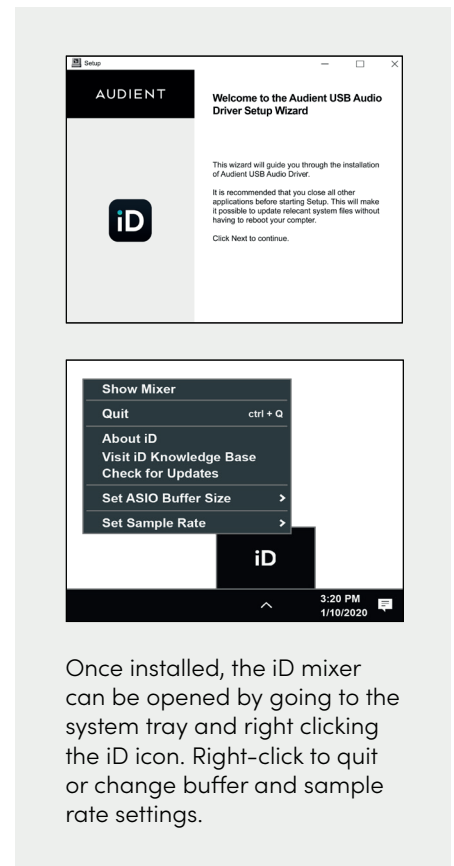


Once installed, the iD mixer can be opened by going to the system tray and right clicking the iD icon. Right-click to quit or change buffer and sample rate settings.

## MacOS

1. Download the iD application for Mac from [audient.com/iD44/downloads](https://audient.com/iD44/downloads)
2. Open the downloaded file and drag the iD icon into the Applications folder.
3. Connect the iD44 to the Mac using the included USB-C cable or USB-C to A cable.
4. Run the iD application from your Applications folder. If a firmware update is available you'll be prompted to install it.
5. A registration screen will appear allowing you to register your product with Audient ARC to receive firmware updates as well as exclusive plugins and software.

### System requirements:

macOS 10.11.6 (El Capitan) or Later  
Mac Intel CPU or Apple Silicon  
1GB RAM Minimum

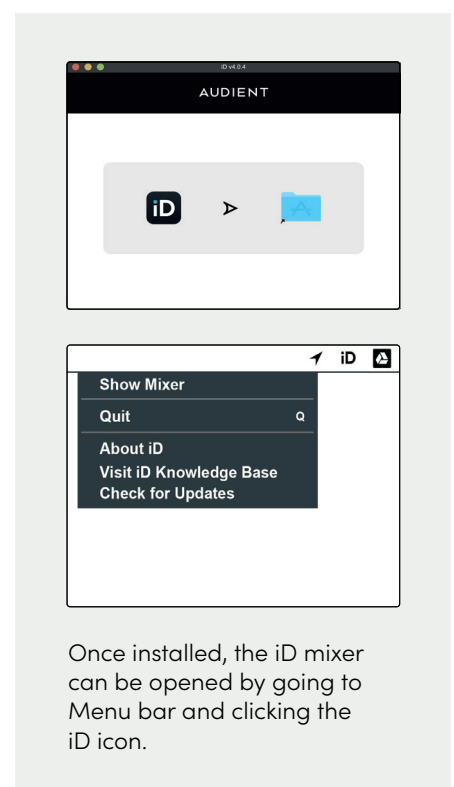

Once installed, the iD mixer can be opened by going to Menu bar and clicking the iD icon.

AUDIENT

[audient.com](https://audient.com)